

<u>WWW.VALLEYTENT.COM</u> \* (201)-476-56

## **MARGARITA MACHINE**

## **OPERATING INSTRUCTIONS**

- 1. Fill the tank with 2 gallons of cold water and ½ gallon of drink concentrate.
- 2. Up to ½ gallon of alcohol may be added at this point. Please remember that alcohol acts as an anti-freeze. Alcohol will extend the freeze time, too much alcohol will prevent freezing. It is recommended that alcohol is added to the bottom of the cup, and then fill the cup with the frozen drink.
- 3. Turn on main power switch and agitator switch. (The agitator switch must be on before setting to liquid or slush mode.
- 4. For slush, press the cooler switch to the snowflake \*\*\*
- 5. For liquid, press the cooler switch to up position (I) or the one that looks like a wave. \*Note that your machine is equipped with a time delay relay that provides for a four minute delay from the time of the initial start. This is to prevent the compressor from short cycling. Once the compressor is on, the green light will be on.
- 6. To rinse out tank, add 2 gallons of water and process through the machine in liquid mode. Valley Tent will clean and sanitize the machine.

For any immediate problems, please call Judy on her cell – 201-906-9061