



# **Valley Tent Rental L.L.C.**

---

**WWW.VALLEYTENT.COM**

**(201)-476-5666**

## **POPCORN MACHINE**

### **OPERATING INSTRUCTIONS**

- 1. Turn on main power switch. Turn on kettle motor switch.**
- 2. Lift kettle cover, cut open oil side of popcorn packet and add oil to kettle.**
- 3. Immediately cut open the popcorn side of the packet and add to kettle. CLOSE KETTLE LID.**
- 4. Close doors and wait for popcorn to pop. If the interior of the machine steams up, open one of the doors.**
- 5. After several minutes the popcorn will pop. Once you hear the corn stop popping, open doors, lift kettle lid, turn kettle handle clockwise a ¼ turn and dump kettle.**
- 6. Repeat steps 2 through 5 until the desired amount of popcorn is made.**
- 7. Turn kettle motor switch off. (Never leave the kettle motor switch in on position unless oil and popcorn is in the kettle.)**
- 8. Cleaning: Simply empty out remaining popcorn. Valley Tent will clean and sanitize the machine.**

**For any immediate problems, please call Judy on her cell phone – 201-906-9061**