



Valley Tent Rental, L.L.C.

WWW.VALLEYTENT.COM * (201)-476-5666

PATIO HEATER

Lighting

- Turn cylinder valve off.
- Push control knob in and turn off.
- Wait 5 minutes for any gas to clear.
- Turn cylinder valve on.
- Open viewing hole by sliding cover to either side.
- Push control knob in and rotate to pilot position.
 - NOTE: For initial start or after any cylinder change, hold control knob in for 2 minutes to purge air from gas lines before proceeding.
- Push igniter button once. Pilot light flame will appear and be visible through viewing hole.
- Release control knob after 30 seconds. Pilot light will remain lit. If not, return to step 1.

Shut Down

- Turn control knob clockwise to pilot. Burner will extinguish but pilot will remain on.
- To extinguish pilot, depress control knob and continue to turn it clockwise to off.
- Turn cylinder valve clockwise to off and disconnect regulator when heater is not in use.

If you still have difficulties with the heater after following the above listed steps please call the emergency contact number 551-427-3971 or 201-819-8892.