



Valley Tent Rental, L.L.C.

WWW.VALLEYTENT.COM * (201)-476-5666

TENT HEATER

- Make sure there is electrical power to the heater box
- Open valve on propane tank
- Turn switch on heater box to heat
- Turn on thermostat inside tent

When we set up the heater in your tent it was tested and run for at least 10 minutes. Everything was working properly when we left. Sometimes a customer has difficulties with the heater operation. 99% of the time when the heater does not work it is one of the issues listed below.

If the heater does not turn on at all

Check and make there is power to the heater. If there is a GFI switch between the heater and the outside receptacle of your house please hit the reset button on the GFI switch. Check thermostat and make sure black knob is turned on.

If the heater blows cold air

Check the propane tank. Most likely it is either off or empty.

If the heater shuts down or stops blowing air

Most likely the air intake on the heater box (the grid on one end) is blocked or the diffuser (the air duct going into the tent) is blocked. Make sure that no items have been placed in front of the air intake on the box or in front of the diffuser.

If you are still having difficulties with the heater after following the above listed steps, please call the emergency contact number 201-819-8892.